












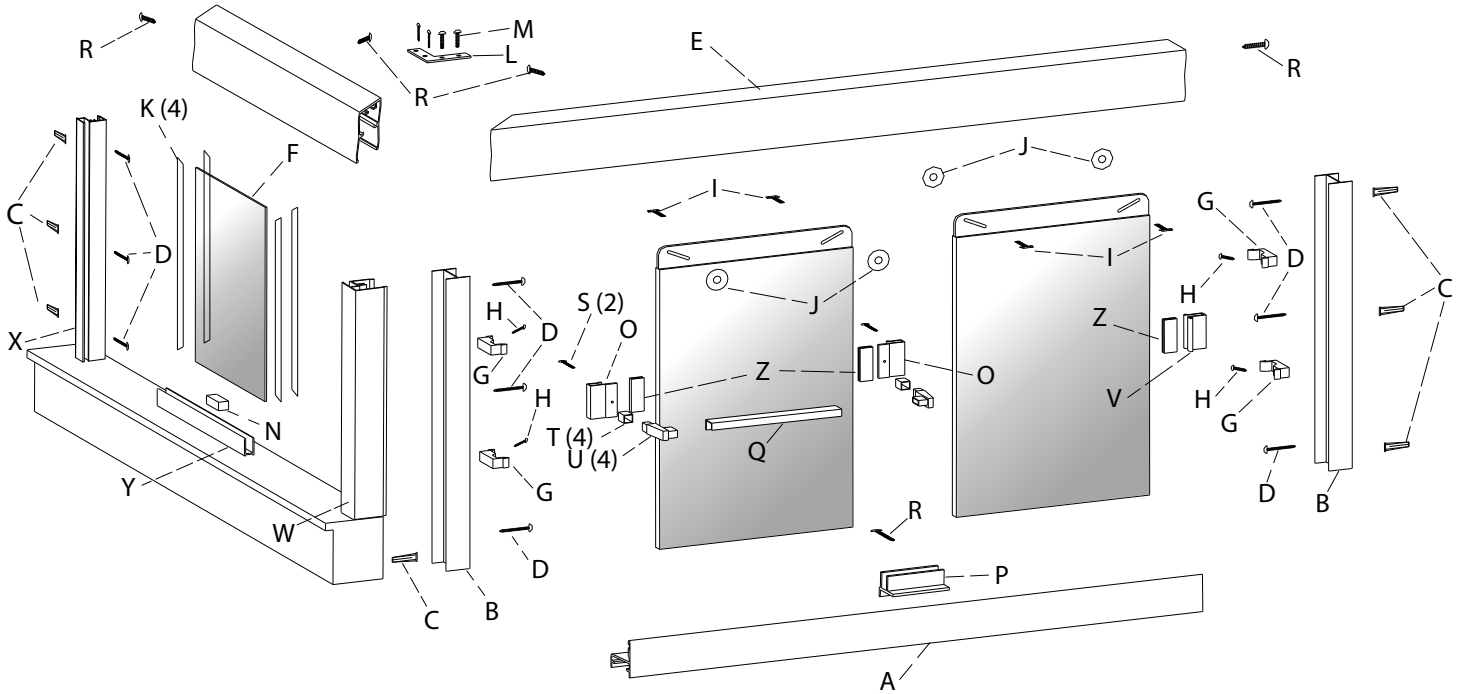















Installation Instructions

Crystal Series 5450 / 6450 with Buttress Return Panel



Parts

ITEM	PART #	QTY	DESCRIPTION		ITEM	PART #	QTY	DESCRIPTION	
A	802	1	Tub Track with Vinyl		N	148	1	Glass Block	
B	814	2	Wall Jamb		O	836	2	Towel Bar Bases	
C	113	7	Plastic Wall Anchor		P	151	1	Bottom Guide	
D	110	6	#8 x 1 1/2" Pan Head Screw		Q	816	1	Towel Bars	
E	825	2	Tub Header		R	119	5	#6 x 1/2" Pan Head Screw	
F		1	Glass Panel		S	118	2	#10-24 x 1 1/8" Flat Head Screw	
G	131	3	Vinyl Jamb Bumpers		T	158	2	Towel Bar Trim Rings	
H	115	3	#6 x 3/4" Pan Head Screw		U	138	2	Acrylic Towel Bar Bracket	
I	116	4	#6 x 32-3/8" Hex Head Screw		V	837	1	Clamp On Handle	
J	130	4	Roller Bearing		W	820	1	90-Degree Tub Post	
K	VM-4	4	Wall Channel Vinyl		X	818	1	180-Degree Tub Post	
L	145	1	90-Degree Bracket		Y	210	1	Sill	
M	122	4	#6 x 1/4" Phillip Pan MS		Z	VM-18	3	Clamp-On Vinyl (1 1/2")	

Tools



Hacksaw



Philips Screwdriver




Level



#32 and 3/16" Drill Bit



Drill



Masking Tape




Straight Edge



Tape Measure



Silicone



Mallet



Safety Glasses

Installation Notes

- Unpack your unit carefully. Lay out and identify all parts using the instruction sheets as a reference. Before discarding the carton, check for any small hardware bags.
- If any parts are damaged or missing, refer to the description noted in the instructions when contacting your dealer for replacements.
- Please wear safety glasses whenever drilling or cutting.
- Handle the glazed panels carefully; tempered glass is difficult to break, but the sharp corners of the panels can damage tile and floor coverings.
- Before installing, check the tub rim for level and both walls for plumb. If either are out of plumb more than 3/8", you may want to contact your dealer for tapered fillers which can be used to level tub track or plum the side jambs.




Caution: Tempered glass cannot be cut or drilled

1.

MARKING for POSTS


Step 1a.

- Position 180-degree post (X) on back wall. Position wall jamb (B) and attached 90-degree post (W) on centerline of the front sill. Plumb the 180-degree post (X) and mark holes in wall.
- Remove 180-degree post (X) and drill marked holes with 3/16" masonry drill bit.

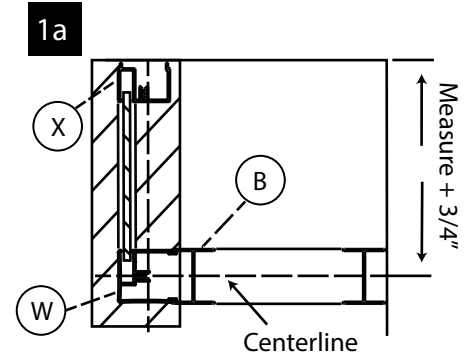

Step 1b.

- Pound in wall anchors and secure 180-degree post with three #8 X 1 1/2" pan head screws (D).

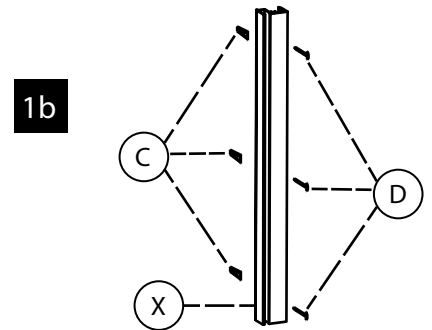


2.

POSITIONING WALL POSTS

Step 2a.

- Insert sill (Y) 1/2" into 180-degree post (X).
- Press 90-degree post (W) and wall jamb (B) into sill (Y) 1/2".
- Make sure 90-degree post and wall is on centerline of enclosure.
- Mark holes through wall jamb (B) onto the buttness. Take post off.

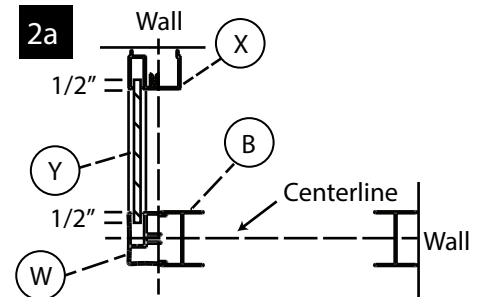


3.

PREPARING the TUB TRACK

Step 3a.

- Measure from wall to buttness.
- Take this measurement and subtract 1/8" and cut tub track (A) to that dimension.
- Position the tub track in the center of the tub rim and slide over tub track wall jamb (B) with the tall leg facing the exterior.

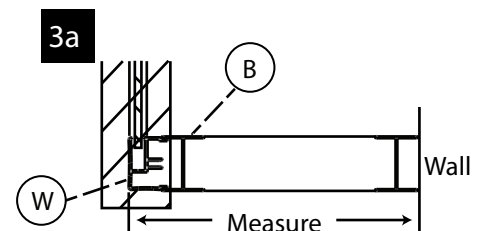


3.

PREPARING the TUB TRACK CONTINUED

Step 3b.

- Press both wall jambs (B) into position over the tub track. Masking tape can be used to temporarily hold parts in place.
- Wall jamb (B) and 90-degree tub post (W) may become fastened from factory.

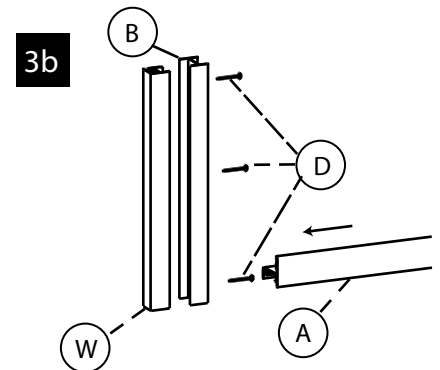


4.

MARKING for WALL JAMB

Step 4a.

- Use a level to plumb wall jamb (B), then mark the pre-drilled hole locations on the wall.
- Lightly mark along both sides of the tub track (A) with a pencil, then remove all parts. For tile or marble, drill six (3 per wall) 3/16" diameter holes and insert plastic wall anchors (C). Drill a hole on the buttress wall. A center punch helps locate the holes accurately.

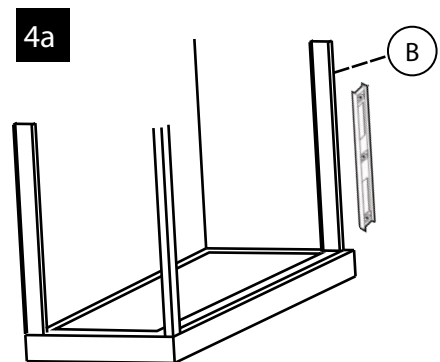


5.

SECURING the TUB TRACK

Step 5a.

- Before replacing the tub track (A), force a slight downward bow in extrusion. This will ensure that the track fits tight to the tub.
- Run two beads of silicone inside the penciled mark on the tub rim. Place the tub track in the exact position you marked in step 4a and set it firmly in the silicone.
- Silicone the end where tub track (A) meets the wall.
- Replace wall jamb (B) and attach to wall with #8 X 1 1/2" screws (D). Do not over tighten jamb screws.

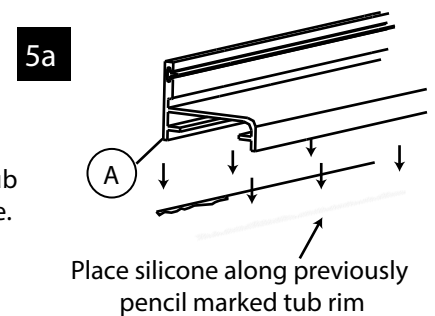


6.

POSITIONING STATIONARY PANEL

Step 6a.

- Place glass block (N) in the middle of sill (Y).
- Position glass panel (F) so the 180-degree and 90-degree posts overlap glass by 1/2".
- Replace wall jamb (B) and 90-degree post (W) over sill (Y) and attach to buttress using #8 x 1-1/2" screws.
- Cut the vinyl slightly longer than the opening to prevent shrinkage.
- Press the interior vinyl into place. Use a wood block to tape the exterior vinyl into place starting at both ends and working towards the middle.

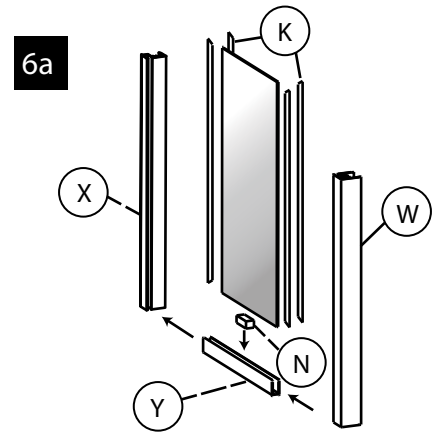


7.

FITTING the TUB HEADER

Step 7a.

- Measure from both walls to 90-degree post (W).
- Take measurement and add 3/4" and mark from header (measure from long edge of miter). Cut header then do the same for return header.
- Slide header together with 90-degree bracket (L) and secure with #6 x 1/4" phillips screw (M).
- Place header on unit and from the inside of the enclosure, drill one hole, with a #32 drill bit, through the header and wall jamb on each end of the header and at attached post (B and W).
- Attach the header to the tub jamb using two #6 X 1/2" screws (R).

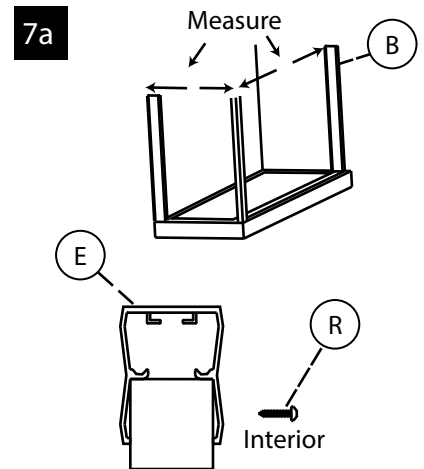


8.

INSTALL the GLASS PANELS

Step 8a.

- To install panels, attach the four nylon roller bearings (J) to the door panels using four #6-32 X 3/8" hex head screws (I) centered in the slots in the top fins. Patterned glass is always installed with the rough surface of the glass to the exterior of the unit.

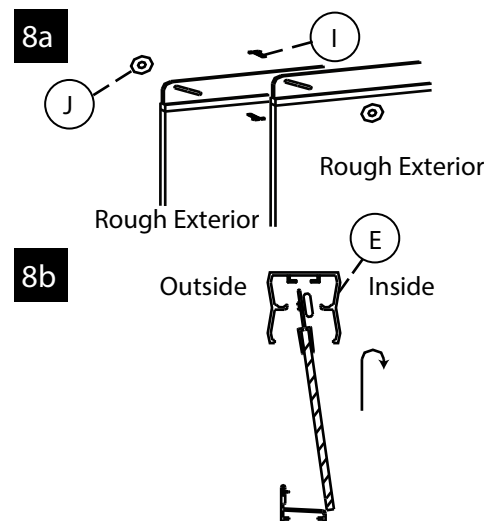

Step 8b.


- To set slider glass in place, hold interior panel inside of tub, insert rollers up into header and lower into roller track.

9.

CENTER GUIDE

Step 9a.

- Locate the nylon bottom guide (P) in the center of the tub track (A) and place the bottom guide into place.
- Using the factory holes as a template, drill through hole into track with # 32 drill bit.
- Attach center guide with #6 X 3/8" pan head screw (R).

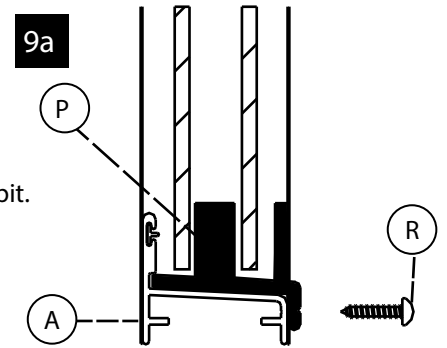


10.

TOWEL BAR and HANDLE

Step 10a.

- Slide the two towel bar trim rings (T) over the acrylic towel bar brackets (U) and attach to the towel bar bases (O) with #10-24 X 1/2" flat head screws (S).
- Force the towel bar (Q) onto one of the brackets. At the center of the exterior glass panel, press the base (with towel bar attached) and vinyl (Z) over the glass.
- Install the remaining base in a similar manner, locking the towel bar into place between the two brackets.

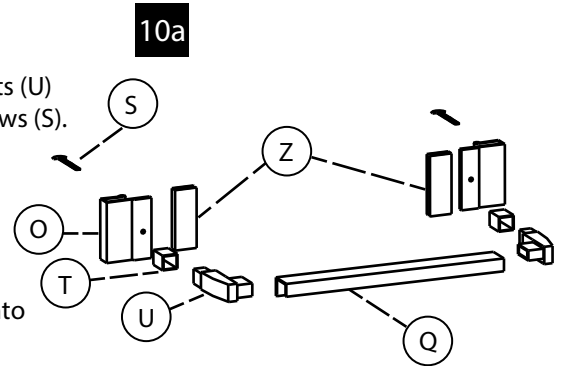


11.

TOWEL BAR and HANDLE

Step 11a.

- Press one clamp on handle (V) and vinyl (Z) into place on the interior glass panel at the same height the towel bar bases (O) were mounted on the exterior panel.
- See illustration in step 10a as reference to which panel the towel bar and handle is applied to.

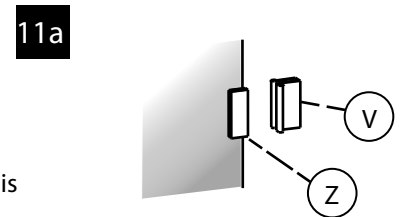


12.

ADDING SILICONE

Step 12a.

- Silicone each end of tub track (A) where they meet the wall jambs (B). Run a bead of silicone along interior and exterior edge of tub track and wall jambs.

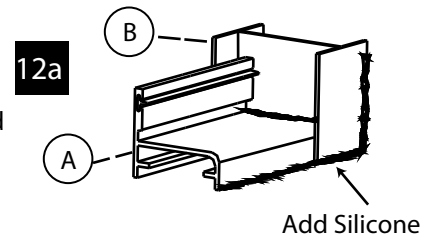

Step 12b.

- We recommend that you let the silicone dry for 24 hours before using the enclosure.



24hrs